

# Q-SERIES COVERAGE INFORMATION

## HOW TO INSTALL

### TS-Q160C-RN / TS-Q160F-RN

Be sure to read this instruction manual before installing this speaker.

The following data is based on Pioneer's vehicle research and is provided as a guideline only.

These installation guidelines are intended to be strictly recommendations and are not complete installation instructions.

#### ■ Speaker installation coverage

(Symbol)

✓	It is possible to install the speaker.
N/A	Installation is not possible or recommended.

Information as of March 2026

MAKE	MODEL	MODEL YEAR	FRONT DOOR			REAR DOOR		
			TS-Q160C-RN	TS-Q160F-RN	Remarks	TS-Q160C-RN	TS-Q160F-RN	Remarks
DACIA	Dokker Stepway	2012 - 2021	✓	✓		N/A	N/A	13 cm/5" size
	Dokker VU	2012 - 2021	✓	✓		N/A	N/A	
	Duster II	2017 - 2024	✓	✓		N/A	✓	
	Lodgy	2012 - 2022	N/A	✓		N/A	✓	
	Lodgy Stepway	2012 - 2022	N/A	✓		N/A	✓	
	Logan II	2012 - 2020	✓	✓		N/A	N/A	13 cm/5" size
	Logan MCV II	2013 - 2020	✓	✓		N/A	N/A	13 cm/5" size
	Logan MCV II Stepway	2013 - 2020	✓	✓		N/A	N/A	13 cm/5" size
	Logan Van	2013 - present	✓	✓		N/A	N/A	13 cm/5" size
	Sandero II	2012 - 2020	✓	✓		N/A	N/A	13 cm/5" size
	Sandero II Stepway	2012 - 2020	✓	✓		N/A	N/A	13 cm/5" size
DATSUN	Go	2014 - 2022	✓	✓		N/A	N/A	
	Go +	2014 - 2022	✓	✓		N/A	N/A	
	Go Cross	2018 - 2022	✓	✓		N/A	N/A	
FIAT	Talento	2016 - 2020	✓	✓		N/A	N/A	13 cm/5" size
	Talento VU	2016 - 2020	✓	✓		N/A	N/A	
INFINITI	FX35	2008 - 2013	✓	N/A		N/A	✓	
	G35	2003 - 2007	✓	N/A		N/A	✓	
	I30	2000 - 2001	✓	N/A		N/A	✓	
	I35	2002 - 2004	✓	N/A		N/A	✓	
	M35	2005 - 2010	✓	N/A		N/A	✓	
	M45	2005 - 2010	✓	N/A		N/A	✓	
	Q45	2002 - 2006	✓	N/A		N/A	✓	
	Q50	2013 - 2024	✓	N/A		N/A	✓	
LADA	Largus Cross	2012 - present	✓	✓		N/A	N/A	13 cm/5" size
	Largus Universal	2012 - present	✓	✓		N/A	N/A	13 cm/5" size
	Largus Wagon	2012 - present	✓	✓		N/A	N/A	
	Vesta	2015 - present	✓	N/A		N/A	N/A	13 cm/5" size
	Vesta SW	2015 - present	✓	N/A		N/A	N/A	13 cm/5" size
	Xray	2015 - 2022	✓	N/A		N/A	N/A	
MITSUBISHI	Express	2020 - 2022	✓	✓		N/A	N/A	
	ASX	2023 - present	✓	N/A		N/A	✓	
	Colt	2023 - 2025	✓	N/A		N/A	✓	
NISSAN	Almera III	2011 - 2019	✓	N/A		N/A	N/A	
	Almera IV	2019 - present	✓	N/A		N/A	✓	
	Altima V	2013 - 2018	✓	N/A		N/A	N/A	
	Armada II	2017 - 2020	✓	N/A		N/A	✓	

# TS-Q160C-RN / TS-Q160F-RN

(Symbol)

✓	It is possible to install the speaker.
N/A	Installation is not possible or recommended.

MAKE	MODEL	MODEL YEAR	FRONT DOOR			REAR DOOR		
			TS-Q160C-RN	TS-Q160F-RN	Remarks	TS-Q160C-RN	TS-Q160F-RN	Remarks
NISSAN	Armada II	2021 - 2024	N/A	N/A	6" × 9" size	N/A	✓	
	Ariya	2023 - present	N/A	N/A		N/A	✓	
	Cube	2009 - 2014	✓	✓		N/A	✓	
	Juke I	2010 - 2019	✓	N/A		N/A	✓	
	Juke II	2019 - present	✓	N/A		N/A	✓	
	Kicks P15 / D15	2016 - present	✓	N/A		N/A	✓	
	Leaf I	2010 - 2017	✓	N/A		N/A	✓	
	Leaf II	2018 - 2025	N/A	N/A		N/A	✓	
	Maxima VIII	2016 - 2023	N/A	N/A	6" × 9" size	N/A	✓	
	Murano III	2015 - 2024	N/A	N/A		N/A	✓	
	Navara Double Cab	2014 - present	N/A	N/A	6" × 9" size	N/A	✓	
	Navara Single Cab	2014 - present	N/A	N/A	6" × 9" size	N/A	✓	
	Note	2014 - 2019	✓	✓		N/A	✓	
	NP300	2014 - present	N/A	N/A	6" × 9" size	N/A	✓	
	NV200	2009 - present	✓	N/A		N/A	N/A	
	NV300	2016 - 2021	✓	✓		N/A	N/A	
	NV400	2012 - 2022	✓	✓		N/A	N/A	
	NV1500 / 2500	2012 - 2021	N/A	N/A	6" × 9" size	N/A	✓	
	Pathfinder II	1996 - 2004	✓	✓		N/A	✓	
	Pathfinder III	2004 - 2014	N/A	N/A	6" × 9" size	N/A	✓	
	Pathfinder IV	2013 - 2020	N/A	N/A	6" × 9" size	N/A	✓	
	Pathfinder V	2022 - present	N/A	N/A	6" × 9" size	N/A	✓	
	Patrol VI	2010 - 2020	N/A	N/A	6" × 9" size	N/A	✓	
	Pulsar	2014 - 2018	✓	✓		✓	✓	
	Qashqai II	2013 - 2021	✓	✓		N/A	✓	
	Qashqai III	2021 - present	✓	N/A		N/A	✓	
	Quest III	2004 - 2009	✓	N/A		N/A	✓	
	Quest IV	2011 - 2016	N/A	N/A	6" × 9" size	N/A	✓	
	Rogue II	2014 - 2020	✓	✓		N/A	✓	
	Rogue III	2021 - present	N/A	N/A	6" × 9" size	N/A	✓	
	Sentra / Sylphy V	2000 - 2006	✓	N/A		N/A	✓	
	Sentra / Sylphy VII	2013 - 2019	✓	N/A		N/A	✓	
	Sentra / Sylphy VIII	2020 - 2025	N/A	N/A	6" × 9" size	N/A	✓	
	Titan I	2004 - 2015	N/A	N/A	6" × 9" size	N/A	✓	
	Titan II	2016 - 2024	N/A	N/A	6" × 9" size	N/A	✓	
	Teana	2008 - 2013	✓	N/A		N/A	✓	
	Townstar	2021 - present	✓	✓		N/A	✓	
	Versa	2011 - 2019	✓	✓		N/A	✓	
	Versa	2019 - 2025	✓	✓		N/A	✓	
	X-Trail III	2013 - 2022	✓	N/A		N/A	✓	
Urvan	2012 - 2021	✓	✓		N/A	N/A		
Xterra	2005 - 2015	N/A	N/A		N/A	✓		
Z	2013 - present	N/A	N/A	6" × 9" size	N/A	✓		
Opel / VAUXHALL	Vivaro B	2014 - 2019	✓	✓		N/A	N/A	13 cm/5" size
	Vivaro B VU	2014 - 2019	✓	✓		N/A	N/A	
RENAULT	Alaskan	2017 - present	N/A	N/A	6" × 9" size	N/A	✓	
	Captur I Phase 1	2013 - 2017	✓	✓		N/A	✓	
	Captur I Phase 2	2017 - 2019	✓	✓		N/A	✓	
	Captur II	2019 - present	✓	✓		N/A	✓	
	Clio IV Phase 1	2012 - 2016	✓	N/A		N/A	N/A	13 cm/5" size

# TS-Q160C-RN / TS-Q160F-RN

(Symbol)


✓	It is possible to install the speaker.
N/A	Installation is not possible or recommended.

MAKE	MODEL	MODEL YEAR	FRONT DOOR			REAR DOOR		
			TS-Q160C-RN	TS-Q160F-RN	Remarks	TS-Q160C-RN	TS-Q160F-RN	Remarks
RENAULT	Clio IV Phase 1 Estate	2012 - 2016	✓	N/A		N/A	N/A	13 cm/5" size
	Clio IV Phase 1 Grandtour	2012 - 2016	✓	N/A		N/A	N/A	13 cm/5" size
	Clio IV Phase 2	2016 - 2019	✓	N/A		N/A	N/A	13 cm/5" size
	Clio IV Phase 2 Estate	2016 - 2019	✓	N/A		N/A	N/A	13 cm/5" size
	Clio IV Phase 2 Grandtour	2016 - 2019	✓	N/A		N/A	N/A	13 cm/5" size
	Clio V	2018 - 2025	✓	N/A		N/A	N/A	13 cm/5" size
	Espace V	2015 - 2023	✓	✓		✓	✓	
	Grand Scenic IV Business	2016 - 2022	✓	✓		✓	✓	
	Grand Scenic IV Intens	2016 - 2022	✓	✓		✓	✓	
	Grand Scenic IV Life	2016 - 2022	✓	✓		✓	✓	
	Grand Scenic IV Zen	2016 - 2022	✓	✓		✓	✓	
	Kadjar	2015 - 2022	✓	✓		N/A	✓	
	Koleos I	2007 - 2016	✓	✓		✓	✓	
	Koleos II	2016 - 2025	✓	✓		✓	✓	
	Laguna III	2008 - 2015	✓	✓		✓	✓	
	Latitude	2010 - 2015	✓	✓		✓	✓	
	Master III	2010 - 2024	✓	N/A		N/A	N/A	13 cm/5" size
	Master III VU	2010 - 2024	✓	N/A		N/A	N/A	13 cm/5" size
	Mégane III CC	2009 - 2016	✓	N/A		N/A	N/A	13 cm/5" size
	Mégane IV Business	2015 - 2022	✓	✓		N/A	✓	
	Mégane IV GT	2015 - 2022	✓	✓		✓	✓	
	Mégane IV Intens	2015 - 2022	✓	✓		✓	✓	
	Mégane IV Life	2015 - 2022	✓	✓		N/A	✓	
	Mégane IV Sedan	2015 - 2022	✓	✓		✓	✓	
	Mégane IV Zen	2015 - 2022	✓	✓		✓	✓	
	Mégane IV Estate Business	2015 - 2022	✓	✓		N/A	✓	
	Mégane IV Estate GT	2015 - 2022	✓	✓		✓	✓	
	Mégane IV Estate Intens	2015 - 2022	✓	✓		✓	✓	
	Mégane IV Estate Life	2015 - 2022	✓	✓		N/A	✓	
	Mégane IV Estate Zen	2015 - 2022	✓	✓		✓	✓	
	Scénic III	2009 - 2016	✓	✓		N/A	✓	
	Scénic IV Business	2016 - 2022	✓	✓		N/A	✓	
	Scénic IV Intens	2016 - 2022	✓	✓		✓	✓	
	Scénic IV Life	2016 - 2022	✓	✓		N/A	✓	
	Scénic IV Zen	2016 - 2022	✓	✓		N/A	✓	
	Talisman	2015 - 2022	✓	✓		✓	✓	
	Talisman Estate Grandtour	2015 - 2022	✓	✓		✓	✓	
	Trafic III	2014 - present	✓	N/A		N/A	N/A	
	Trafic III VU	2014 - present	✓	N/A		N/A	N/A	
	Twingo III	2014 - 2024	✓	✓		N/A	N/A	
SAMSUNG	QM3	2013 - 2019	✓	N/A		N/A	✓	
	QM6	2016 - 2025	✓	N/A		N/A	✓	
	SM5	2009 - 2019	✓	N/A		✓	✓	
	SM6	2016 - 2025	✓	N/A		✓	✓	
	SM7	2011 - 2019	✓	N/A		✓	✓	
SMART	Forfour 4 Doors	2014 - 2021	✓	✓		N/A	N/A	
	Fortwo	2014 - 2019	✓	✓		N/A	N/A	
	Fortwo Brabus	2016 - 2024	✓	✓		N/A	N/A	
	Fortwo Cabriolet	2016 - 2024	✓	✓		N/A	N/A	
	Fortwo EQ	2017 - 2024	✓	✓		N/A	N/A	

# TS-Q160C-RN / TS-Q160F-RN


## ■ Woofer installation procedure

### 1. Preparation Before Installation

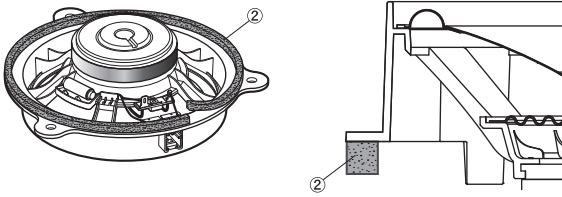

- Attach the included vibration-damping cushion ② to the back of the speaker.

### 2. Remove original equipment speaker

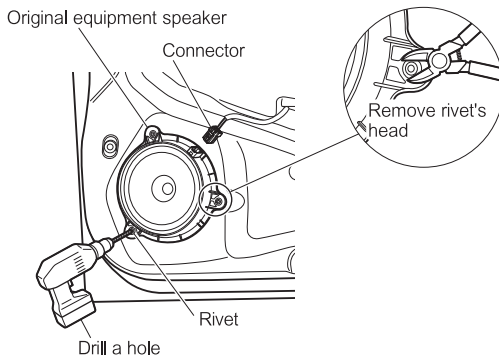


- Remove the original connector.

〈In the case of using rivets〉

- Drill a hole in the center of the rivet or remove the head of rivet using the appropriate tool, then take the speaker out.


- ⚠ Removed rivets can not be reused.  
To prevent abnormal noise, please collect any rivet fragments after removal.

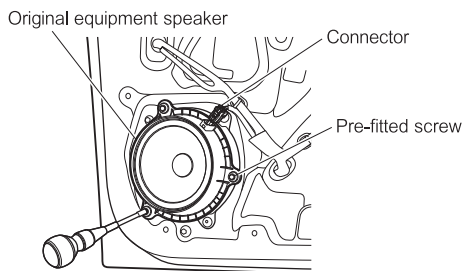

〈In the case of using screws〉


- After removing the pre-fitted screws with the appropriate tool, remove the speaker.

### 3. Installing speaker

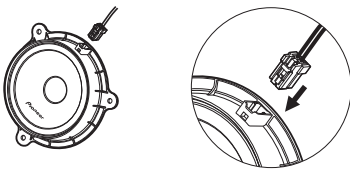


- Connect the speaker to the original connector.

When installing the speaker, use the pre-fitted screws or the included rivets ①.

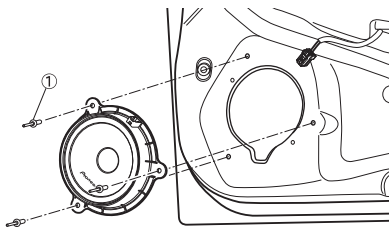

〈In the case of using rivets〉

- Attach the speaker to the vehicle using the included rivets ①.  
※ Use a rivet fixing tool

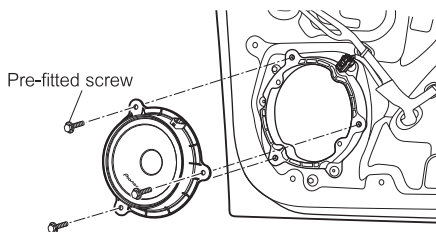

〈In the case of using screws〉

- Attach the speaker to the vehicle using pre-fitted screws.


## ■ Woofer parts included



# TS-Q160C-RN


## ■ Tweeter installation procedure

### 1. Preparation Before Installation

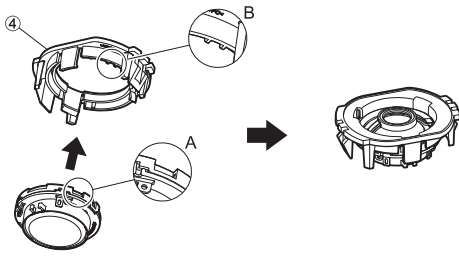


- Align groove A of the tweeter with groove B of the bracket ④ and snap it into place.

### 2. Remove original equipment speaker

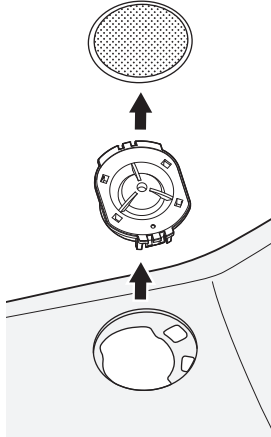


- Remove the original connector.
- Remove the original tweeter from its original mounting location.

### 3. Installing tweeter

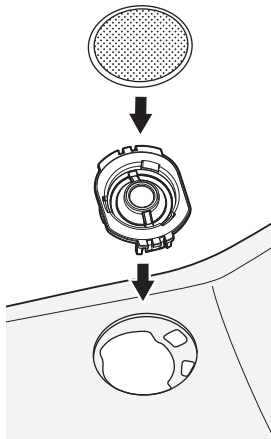


- Properly position and install the tweeter, which is integrated with bracket ④, in the original mounting location.

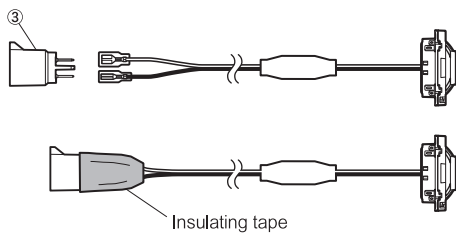


- Connect the included connector ③ to the tweeter cord.

⚠ Ensure the connection terminals are covered with an insulating cover. Secure the cover with insulating tape to prevent it from coming loose. Contact between the terminal and any metal part of the vehicle may cause fire or malfunction.

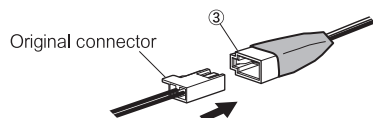

- Connect the included connector ③ to the original connector.

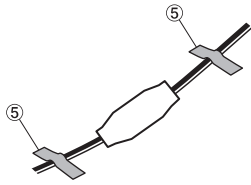

• Secure the cord as needed using the included cushion ⑤.

### ■ Tweeter parts included

